



Professional Tire Gauge and Inflator

Operating Instructions

WARNING: Please read the entire instruction manual before attempting to operate this tool. Keep instructions stored for future reference.



Specifications:

- 3-1/8" Display
- 0-180 PSI Range
- Display BAR, PSI Measurement
- Ø80mm Pressure Gauge
- 0-12 Bar/175 PSI Measurement
Range Accurate to 2 PSI
- 21" Swivel Hose



1. Remove tire valve cap.
2. With clip-on air chuck lever depressed, firmly press chuck onto tire valve stem and release lever, ensure that no air leaks.
3. Press the grip to inflate, press the grip half-way to deflate.
4. Max. inlet Pressure 12 Bar/175 PSI,
Measuring Range: 0-12 Bar (0-175 PSI)
Reading Accuracy is 0.1 Bar (2 PSI)
5. **IMPORTANT: to avoid the risk of personal injury, especially to the eyes, face or skin, do not direct the stream at your face or at another person.**

Always wear safety goggles when operating this tool.

Manufacturer reserves the right to change product features at any time.

⚠ WARNING: This product can expose you to chemicals, including DEHP, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

Limited 90 Day Warranty

For 90 days from the date of purchase of this OEMTOOLS product you find any defect in material or workmanship, through normal usage and not including standard wear, either return it to the place of purchase, or send it to OEMTOOLS for repair or replacement at our discretion. In order to obtain this service send your tool and proof of purchase, transportation pre-paid, to OEMTOOLS Dept, 3580 E. Raines Rd. #3, Memphis, TN 38118. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Please see our website for full warranty information.

OEMTOOLS Customer Service: 1-866-458-2472
www.oem-tools.com

3580 E. Raines Rd. Suite 3
Memphis, TN 38118