

OEM[®]
Tools for Professionals

Piston Groove Cleaner

The blades are set in the wheel which may be rotated to bring the desired blade into position.



27038

OEM[®]
Tools for Professionals

Piston Groove Cleaner

The blades are set in the wheel which may be rotated to bring the desired blade into position.

1. Do not loosen the center screw for this operation. Ball and spring ratchet hold blade in position.
2. After bringing correct tooth of blade into position place the tool on the piston with 'V' in desired groove.
3. Slide the tool body until the tooth enters the groove and touches the bottom.
4. Close the small lever which will automatically move the slide forward to compress the pressure spring.
5. Now turn tool to the left or counter clockwise for cleaning the groove.

Caution: Always wear safety glasses

MADE IN TAIWAN

27038



0 76812 27038 2